Service data 0218 - F 650 GS Equipment trim-level variant: 0499 - Lowered suspension 0603 - Anti-theft alarm Anti-theft alarm 0524 - BMW Motorrad ABS 0530 - Tyre pressure monitoring (RDC) Valid Designation Condition Value 11 - Engine Engine oil, capacity 2.91 with filter change 2.71 without filter change 0.31 additional, if swingarm shaft cover is removed Fluids and lubricants of products recommended by BMW Motorrad and generally admissible viscosity classes 0.41 Engine oil, quantity for topping maximum top-up quantity between up MIN and MAX marks Fluids and lubricants of products recommended by BMW Motorrad and generally admissible viscosity classes Engine oil level Between MIN and MAX marks (MAX) (MIN) 1134 - Valves with springs 0.18...0.26 mm Inlet valve clearance Engine cold max 35 °C 0.27...0.35 mm Exhaust valve clearance Engine cold max 35 °C 1212 - Ignition wiring, spark plugs NGK DCPR 8 E Spark plugs, manufacturer and designation 16 - Fuel supply Usable fuel capacity approx. 16 l Reserve fuel approx. 4 l 17 - Cooling

	between MIN and MAX marks on the expansion tank		
Fluids and lubricants			
Antifreeze	Antifreeze		
	min -25 °C		
Fluids and lubricants			
Antifreeze			
•			
Motorcycle with no weight applied, supported on its side stand	2030 mm		
•			
at outermost diameter of rubber grip, engine cold max 35 °C	12 mm		
Handlebars turned fully left, between handlebar fitting and clutch cable	1 mm		
	It is impermissible for the brake fluid level to drop below the MIN mark.		
Fluids and lubricants			
DOT4 brake fluid			
	Do not permit the brake fluid level to drop below the MIN mark.		
Fluids and lubricants			
DOT4 brake fluid			
When new	5.0 mm		
	1		
	Antifreeze Fluids and lubricants Antifreeze Motorcycle with no weight applied, supported on its side stand at outermost diameter of rubber grip, engine cold max 35 °C Handlebars turned fully left, between handlebar fitting and clutch cable Fluids and lubricants DOT4 brake fluid Fluids and lubricants DOT4 brake fluid	on the expansion tank Fluids and lubricants Antifreeze Fluids and lubricants Antifreeze Motorcycle with no weight applied, supported on its side stand at outermost diameter of rubber grip, engine cold max 35 °C Handlebars turned fluid level to drop below the MIN nandlebar fitting and clutch cable It is impermissible for the brake fluid level to drop below the MIN mark. DOT4 brake fluid Fluids and lubricants DOT4 brake fluid Fluids and lubricants DOT4 brake fluid	

05/2009

Brake-pad wear limit, front	Friction pad only, without backing plate. The wear indicators (grooves) must be clearly visible.	min 1.0 mm	
3421 - Rear brake			
Brake-pad wear limit, rear	Friction pad only, without backing plate. The wear indicators must be clearly visible.	min 1.0 mm	
Brake disc thickness, rear	When new	5.0 mm	
	Wear limit	min 4.5 mm	
3630 - Motorcycle wheels			
Permissible front-wheel imbalance		max 5 g	
Permissible rear-wheel imbalance		max 45 g	
Balancing weight for front wheel Weight must be divided equally across both sides and weights attached to rim on left and right.		max 80 g	
Balancing weight for rear wheel Weight must be divided equally across both sides and weights attached to rim on left and right.		max 80 g	
3632 - Tyres			
Tyre pressure, front	one-up, at tyre temperature 20 °C	2.2 bar	
	two-up and/or with luggage, at tyre temperature 20 °C	2.2 bar	
Tyre pressure, rear	one-up, at tyre temperature 20 °C	2.5 bar	
	two-up and/or with luggage, at tyre temperature 20 °C	2.9 bar	
Tyre tread depth, front and rear	Wear limit, for Germany only	min 1.6 mm	
	Wear limit, outside	Country-specific legal]

05/2009

	Germany	requirements	
Wheel valve test pressure		4 bar	
6575 - Anti-theft alarm			
Battery type and rated voltage		CR123A lithium 3 V	
11 11 - Engine block			
Socket-head screw (hole for TD	OC locating pin)		
M8 x 16	M8 x 16 25 Nm		
11 12 - Cylinder head with cove	r		
Cylinder head cover for cylinde	er head		
M6 x 20		tighten in diagonally opposite sequence	
		10 Nm	
Camshaft bearing cap to cylind	ler head		
M6		Tightening sequence: see Repair Manual	
		Initial torque, tightened uniformly until hand-tight	
		Final torque, 10 Nm	
11 13 - Oil sump			
Oil drain plug			
M24 x 2		40 Nm	
11 31 - Camshaft			
Chain tensioner to cylinder hea	ıd		
M18 x 1.5		40 Nm	
11 42 - Oil filter and lines			
Oil filter		14 Nm	
12 12 - Ignition wiring, spark plugs			
Spark plugs			
M12 x 1.25		18 Nm	
13 71 - Intake air silencer			
Intake air silencer to frame			

05/2009

M6 x 25	6 Nm		
23 00 - Gearbox mechanical			
Pinion to gearbox output shaft			
M10 x 1.5 x 35 Loctite 243	50 Nm		
27 72 - Chain			
Chain slide rail to rear wheel swinging arm			
M5 x 12	4 Nm		
31 42 - Telescopic forks			
Fixed fork tube to fork bridge, top			
M8 x 25	19 Nm		
Fixed fork tube to fork bridge, bottom			
M8 x 25	19 Nm		
Pinch bolt, steering head			
M8 x 40	19 Nm		
Adjusting screw to steering-head bearing			
M18 x 1	Initial torque, 25 Nm		
	Swing handlebars through 3 full arcs		
	Back off through angle of rotation, 60°		
	Final torque, 10 Nm		
Clamp of quick-release axle			
M8 x 25	19 Nm		
Fork stabiliser to slider tube			
M8 x 25 -10.9	19 Nm		
32 71 - Motorcycle handlebars			
Handlebars to clamping block			
M8 x 30 - 10.9	tighten the front screws (as viewed in the forward direction of travel) first, then the rear screws.		
	28 Nm		

33 11 - Final-drive unit housing with cover			
Chain sprocket to chain-sprocket carrier			
Replace nuts	Initial torque, 10 Nm		
Mechanical thread lock	Final torque, 90°		
33 17 - Final-drive unit attachment			
Locknut of the final-drive chain tensioning screw			
M8	19 Nm		
Rear wheel swinging arm to frame			
M14 x 1.5, Replace nut Mechanical thread lock	100 Nm		
33 53 - Springs with mounts			
Spring strut to swinging arm			
Fitted-head screw, M12 x 1.5-10.9, Replace the screw, lubricate the side flats of the screw head Optimoly TA, Micro-encapsulated	100 Nm		
34 11 - Front brake			
Brake disc to front wheel			
M6 x 20, Replace screw Micro-encapsulated	11 Nm		
Brake caliper to fork leg			
ASA screw with washer, M10 x 40	38 Nm		
Bleed screw, brake caliper, front			
M10 x 1 - 4.9	14 Nm		
Bleed screw on handbrake fitting			
M5	2 Nm		
34 21 - Rear brake			
Brake disc with sensor ring to rear-wheel hub			
M8 x 18,5, Replace screw Micro-encapsulated	tighten by stages in diagonally opposite sequence		
	19 Nm		
Rear brake caliper bleed screw			
M10 x 1 - 4.9	14 Nm		

M6 x 16 8 Nm Wheel-speed sensor, rear M6 x 16 8 Nm 36 31 - Wheels with bearings Quick-release axie, front, in axie holder M16 x 1.5 30 Nm RDC sensor, front, to wheel rim Loctite 243 Initial torque, 12 Nm Slacken nut Final torque, 12 Nm Slacken nut Final torque, 12 Nm Af6 53 - Side stand 100 Nm Side stand to pivot mount 46 53 - Side stand W10 - 10.9, Replace screw 38 Nm Side-stand switch to side-stand screw 5 Nm M5 54 - Luggage system 5 Nm Grab handle to rear frame at rear 19 Nm M8 x 35 19 Nm Grab handle to rear frame at front 19 Nm M6 x 16 19 Nm Grab handle to rear frame at front M6 x 16 M6 x 22 4 Nm M6 x 22 4 Nm	34 52 - Electronic components			
Wheel-speed sensor, rear M6x 16 8 Nm M6x 16 8 Nm S6 31 - Wheels with bearings	Wheel-speed sensor, front			
M6 x 16 8 Nm as an anticipation of the second of the	M6 x 16	8 Nm		
36 31 - Wheels with bearings Quick-release axle, front, in axle holder M16 x 1.5 30 Nm RDC sensor, front, to wheel rim Loctite 243 Initial torque, 12 Nm Slacken nut Final torque, 12 Nm Rear quick-release axle in swinging arm W16 x 1.5 100 Nm Rear quick-release axle in swinging arm W16 x 1.5 100 Nm 46 53 - Side stand Side stand to pivot mount W10 - 10.9, Replace screw 38 Nm W16 x 1.5 5 Nm 46 54 - Luggage system 5 Nm Grab handle to rear frame at rear W8 x 35 M8 x 16 19 Nm 46 61 - Front-wheel cover 19 Nm Front-wheel cover to forks 4 Nm M6 x 30 4 Nm	Wheel-speed sensor, rear			
Quick-release axle, front, in axle holder M16 x 1.5 30 Nm RDC sensor, front, to wheel rim Initial torque, 12 Nm Loctite 243 Initial torque, 12 Nm Slacken nut Final torque, 12 Nm Slacken nut Final torque, 12 Nm Rear quick-release axle in swinging arm M16 x 1.5 M16 x 1.5 100 Nm 46 53 - Side stand Side stand Side stand to pivot mount 38 Nm M10 - 10.9, Replace screw 38 Nm Micro-encapsulated Si Nm Side-stand switch to side-stand screw 5 Nm M5 5 Nm 46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front 19 Nm 46 61 - Front-wheel cover 19 Nm Front-wheel cover to forks 4 Nm M6 x 22 4 Nm M6 x 30 4 Nm	M6 x 16	8 Nm		
M16 x 1.5 30 Nm RDC sensor, front, to wheel rim Initial torque, 12 Nm Loctite 243 Initial torque, 12 Nm Slacken nut Final torque, 12 Nm Rear quick-release axle in swinging arm 100 Nm M16 x 1.5 100 Nm 46 53 - Side stand 100 Nm Side stand to pivot mount 38 Nm M10 - 10.9, Replace screw 38 Nm Micro-encapsulated 5 Nm Side-stand switch to side-stand screw 5 Nm M5 5 Nm Grab handle to rear frame at rear 19 Nm M8 x 16 19 Nm Grab handle to rear frame at front 19 Nm M8 x 16 19 Nm Grab handle to rear frame at front 19 Nm M8 x 16 19 Nm M6 x 22 4 Nm M6 x 30 4 Nm	36 31 - Wheels with bearings			
RDC sensor, front, to wheel rim Loctite 243 Initial torque, 12 Nm Slacken nut Final torque, 12 Nm Final torque, 12 Nm Slacken nut Final torque, 12 Nm M16 x 1.5 M16 x 1.5 100 Nm 46 53 - Side stand 100 Nm Side stand to pivot mount M10 - 10.9, Replace screw M10 - 10.9, Replace screw 38 Nm Micro-encapsulated 5 Nm Side-stand switch to side-stand screw 5 Nm M6 54 - Luggage system 5 Nm Grab handle to rear frame at rear 19 Nm M8 x 16 19 Nm Grab handle to rear frame at front 19 Nm M8 x 16 19 Nm Grab handle to rear frame at front 19 Nm M8 x 16 19 Nm M6 x 22 4 Nm M6 x 30 4 Nm	Quick-release axle, front, in axle holder			
Loctite 243 Initial torque, 12 Nm Slacken nut Final torque, 12 Nm Rear quick-release axle in swinging arm 100 Nm M16 x 1.5 100 Nm 46 53 - Side stand 100 Nm Side stand to pivot mount 38 Nm M10 - 10.9, Replace screw 38 Nm Micro-encapsulated 38 Nm Side-stand switch to side-stand screw 38 Nm M5 5 Nm 46 54 - Luggage system 5 Nm Grab handle to rear frame at rear 19 Nm M8 x 35 19 Nm Grab handle to rear frame at front 19 Nm M8 x 16 19 Nm 46 61 - Front-wheel cover 4 Nm Front-wheel cover to forks 4 Nm	M16 x 1.5	30 Nm		
Stacken nut Final torque, 12 Nm M16 x 1.5 100 Nm 46 53 - Side stand Side stand to pivot mount M10 - 10.9, Replace screw 38 Nm Micro-encapsulated 38 Nm Side-stand switch to side-stand screw M5 5 Nm 46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	RDC sensor, front, to wheel rim			
Final torque, 12 Nm Rear quick-release axle in swinging arm M16 x 1.5 100 Nm 46 53 - Side stand Side stand to pivot mount M10 - 10.9, Replace screw 38 Nm Micro-encapsulated 38 Nm Side-stand switch to side-stand screw 5 Nm M5 5 Nm 46 54 - Luggage system 19 Nm Grab handle to rear frame at rear 19 Nm M8 x 35 19 Nm Grab handle to rear frame at front 19 Nm M6 x 16 19 Nm 46 61 - Front-wheel cover 4 Nm Front-wheel cover to forks 4 Nm M6 x 30 4 Nm	Loctite 243	Initial torque, 12 Nm		
Rear quick-release axle in swinging arm M16 x 1.5 100 Nm 46 53 - Side stand Side stand to pivot mount M10 - 10.9, Replace screw M10 - 10.9, Replace screw Micro-encapsulated Side-stand switch to side-stand screw M5 5 Nm 46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30		Slacken nut		
M16 x 1.5 100 Nm 46 53 - Side stand Side stand to pivot mount M10 - 10.9, Replace screw M10 - 10.9, Replace screw Micro-encapsulated Side-stand switch to side-stand screw M5 5 Nm 46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 30 40 x 30		Final torque, 12 Nm		
46 53 - Side stand Side stand to pivot mount M10 - 10.9, Replace screw Micro-encapsulated Side-stand switch to side-stand screw M5 5 Nm M5 5 Nm A6 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm A6 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30	Rear quick-release axle in swinging arm			
Side stand to pivot mount M10 - 10.9, Replace screw 38 Nm Micro-encapsulated 38 Nm Side-stand switch to side-stand screw M5 5 Nm 46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	M16 x 1.5	100 Nm		
M10 - 10.9, Replace screw 38 Nm Micro-encapsulated 38 Nm Side-stand switch to side-stand screw 5 Nm M5 5 Nm 46 54 - Luggage system 46 54 - Luggage system Grab handle to rear frame at rear 19 Nm M8 x 35 19 Nm Grab handle to rear frame at front 19 Nm M8 x 16 19 Nm 46 61 - Front-wheel cover 4 Nm Front-wheel cover to forks 4 Nm M6 x 22 4 Nm M6 x 30 4 Nm	46 53 - Side stand			
Micro-encapsulated Side-stand switch to side-stand screw M5 5 Nm 46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	Side stand to pivot mount			
M5 5 Nm 46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	M10 - 10.9, Replace screw Micro-encapsulated	38 Nm		
46 54 - Luggage system Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	Side-stand switch to side-stand screw			
Grab handle to rear frame at rear M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	M5	5 Nm		
M8 x 35 19 Nm Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	46 54 - Luggage system			
Grab handle to rear frame at front M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	Grab handle to rear frame at rear			
M8 x 16 19 Nm 46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	M8 x 35	19 Nm		
46 61 - Front-wheel cover Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	Grab handle to rear frame at front			
Front-wheel cover to forks M6 x 22 4 Nm M6 x 30 4 Nm	M8 x 16	19 Nm		
M6 x 22 4 Nm M6 x 30 4 Nm	46 61 - Front-wheel cover			
M6 x 30 4 Nm	Front-wheel cover to forks			
	M6 x 22	4 Nm		
16 63 - Motorcycle fairing, windscreen	M6 x 30	4 Nm		
	46 63 - Motorcycle fairing, windscreen			

Windscreen to front panel carrier				
M5 x 18	2.5 Nm			
Chain guard to swinging arm	Chain guard to swinging arm			
M6 x 16	8 Nm			
51 16 - Mirrors, covers, ashtrays, stowage compartments				
Mirror to clamping element				
M14 x 1	20 Nm			
Clamping element to clamping block				
M10	30 Nm			
61 21 - Battery with holder				
Positive lead/earth lead, battery				
M6 x 11	3.5 Nm			